

Service Manual

Dishwasher

ADP 4730 WH

Model Version		Page
	ADP 4730 WH 8511 560 10810	
	Technical data	2 - 4
	Spare part list	5 - 6
	Exploded view	7 - 8
	Circuit diagram	9
	Program diagram	10
	Text/Legend	11 - 16
	Family	WRC - IC MID 7

Technical data

Dimension

Height	85.0	cm
Width	59.7	cm
Depth	59.6	cm
Weight	56	kg

Electronic boards

Service boards	see spare part list
Serial boards	see on the boards itself
Programmed control board and programming of version, see „Board Service“ and „DATA“ on rating plate of inner door:	
UCB	719531
Data set	719521

Basic UCB, not programmed
see on the board itself 4619 727 06231

Succession of programs

Programs	see program diagram
Succession	P1a-P2a-P3a-P4a-P5a-P6a-P7a

Datas Energy Label

Reference program	P5a
Energy Performance	A
Cleaning Performance	A
Drying Performance	A

Alarms

Refill rinse aid
Refill salt

Options

Delay timer 3digits - 1 to 24 h
Sani rinse
Half load

Program information

Start indicator

All programs will be locked after start. Changing the program or finishing the program will be possible only after pressing the start button for longer than 1.5 sec. (Break by customer)

A switching off the appliance or unplug the appliance for a while, this will freeze the program step and later on, the program continues on the same position.

Exception: Switching off the appliance or unplugging the appliance during the drying phase, this will lead directly to the end of the program.

Water Volume at permanent spray system

Water	Volume	Level
Regeneration	0.3 l	15 mm
Back rinse 3x	1.0 l	60 mm
Prewash	4.8 l	120 mm
Main wash	4.2 l	118 mm
Intermediate rinse 1	4.2 l	118 mm
Intermediate rinse 2	4.2 l	118 mm
Clear rinse	4.2 l	118 mm
Safety/ overflow	8.5 l	141 mm

Measuring the level

Remove the coarse sieve, put in a measuring meter into the sump, measure the height of the water level.

Detergent max.

Pre-wash	10	cm ³
Main-wash	40	cm ³
Rinse aid	135	cm ³
6 Dosage steps	1 - 6	ml

Water softener

Saltcontainer	2	kg
Resin container	700	cm ³
Regeneration dosage	300	cm ³

Water pressure

Inlet pressure	0.3 - 10	bar
Spray pump pressure	0.3	bar

Rotations

Spray pump motor	2800	RPM
Drain pump motor	3000	RPM
Spray arm lower	30 - 40	RPM
Spray arm upper	30 - 40	RPM
Fan for drying	2500	RPM

Technical data

Flow rates/ Inlet volume

Flow meter (at 0.3 bar = quantity 1.1 l/min)	208	lmp/l
Spray pump	65	l/min
Drain pump	16	l/min
Pump height max.	1.1	m
Inlet valve	4	l/min
Spray arm lower	~ 33	l/min
Sprayarm upper	~ 27	l/min
Sprayarm/ Shower top	~ 8	l/min

Fan for drying:		
Total	900	l/min
Primary air flow	210	l/min
Secondary air flow	780	l/min

Electrical base data

Voltage	220/ 240	V
Frequency	50	Hz
Total power	2.0 - 2.2	kW
Fuse	10	A

Spray pump motor permanent spray system

Voltage	220/ 240	V
Power consumption	140	W
HI	69	Ω
HA	48	Ω
Capacitor	4	μ F

Drain pump motor

Voltage	220/ 240	V
Power consumption	30	W
Resistance	146	Ω

Fan for drying

Voltage	220/ 240	V
Resistance	141	Ω

Heating - 1 Element system

Voltage	220/ 240	V
Power consumption	1.87/ 2.04	kW
Resistance	24.5	Ω
Heating speed	~ 2.0	°C/min
Temperature on surface	~ 115	°C
Safety thermostat self reset		
(Temperature of water)	~ 85	°C
Fuse	206	°C

Water safty options

Waterstop system	Reflex Waterstop
------------------	------------------

Single electric water inlet valve

Voltage	220/ 240	V
Frequency	50/ 60	Hz
Resistance	3.76	kΩ

Regenerating valve

Voltage	220/ 240	V
Frequency	50/ 60	Hz
Resistance	3.13	kΩ

Coil of dispenser

Voltage	220/ 240	V
Frequency	50/ 60	Hz
Resistance	1.3	kΩ

Reed contacts

flow meter
salt control
rinse aid control

NTC

20 °C	58.1	kΩ
25 °C	47.1	kΩ
30 °C	38.2	kΩ
40 °C	25.4	kΩ
50 °C	17.2	kΩ
60 °C	11.8	kΩ
70 °C	8.3	kΩ
80 °C	6	kΩ
85 °C	4	kΩ

Regeneration

Volume	300	cm ³
after wash cycles	depending on the water softener setting	
water hardness	0 - 40	°dh
	0 - 10.7	mmol/l
	0 - 107	°Fh
Salt consumption for regeneration	~ 77	g
Number of cycles with 2 kg salt	~ 26	

Technical data

Water softener setting

To change the water softener setting:

- Push the POWER button on
- Change to program 2
- Hold the START button for 5 seconds until the LED is flashing
- Water softener setting is shown by flashing LED
- By pushing the START button you can change the setting
- Push the POWER button off to save and exit the water softener setting

Water hardness	German degrees °dH	French degrees °fH	English degrees Clarke °e	mmol/l	Water softener setting is shown by flashing LED
1 soft	0 - 5	0 - 9	0 - 6,3	0 - 0.9	1 x
1 - 2 soft/ medium	6 - 10	10 - 18	7 - 12.6	1 - 1.8	2 x
2 medium	11 - 15	19 - 27	13.3 - 18.9	1.9 - 2.7	3 x
3 medium/ hard	16 - 21	28 - 37	19.6 - 25.9	2.8 - 3.7	4 x
4 hard	22 - 28	38 - 50	26.6 - 35	3.8 - 5.0	5 x
4 very hard	29 - 35	51 - 63	35.7 - 44.1	5.1 - 6.3	6 x
4 extremely hard	36 - 60	64 - 107	44.8 - 74.9	6.4 - 10.7	7 x

Accessory

If you need spare parts apart from the spare part list have a look in the Service Bulletin 4812 718 40084.

Spare part list

Model **ADP 4730 WH**
Service No. **851156010810**
Version **851156010810**

Pos. No.	12NC Code	Description
003 0	4812 440 19594	Traverse
004 0	4812 440 18952	Drip tray assy
004 1	4812 401 18402	Holder
011 0	4812 505 18357	Foot short
022 0	4812 440 10755	Side panel left
022 1	4812 440 10754	Side panel right
024 0	4812 440 10417	Panel, rear
030 0	4812 310 18916	Table top cpl. WH
034 0	4812 404 78237	Spacer
034 1	4812 404 78242	Fastener table top
040 1	4812 417 18774	Hinge left
040 2	4812 417 18773	Hinge right
040 3	4812 417 19172	Protector f.door set
040 3	4812 417 19173	Protector f.door (set)
044 0	4812 492 38358	Spring f.door
047 0	4812 404 48746	Brake f.door
047 1	4812 401 18397	Band,brake
047 2	4812 404 68023	Hook
050 0	4812 440 89032	Plinth WH
053 4	4812 440 89035	Plinth rounded WH
065 0	4812 466 48051	Insulation
103 0	4812 440 10758	Door outer
120 0	4812 440 19456	Door,inner
120 1	4812 440 18969	Batten
130 0	4812 417 58373	Tilt lock cpl. bk
131 0	4812 401 18416	Hook lock
191 0	4812 466 68564	Gasket door
191 3	4812 466 68533	Gasket
192 0	4812 466 68467	Gasket, door lower
241 0	4812 458 19263	Basket ,UPPER STRAIGHT
241 1	4812 458 19264	Holder ,CUPS RIGHT
241 3	4812 528 88113	Wheel,basket upper (set)
241 6	4812 310 19011	Holder ,glasses kit
241 6	4812 458 19251	Holder glasses
241 6	4812 535 78081	Bearing saph
241 8	4812 466 68659	Spacer cap
242 0	4812 310 28233	Basket .LOWER KIT
242 1	4812 528 88112	Wheel,basket lower
242 4	4812 466 48102	Fixation
243 5	4812 310 68025	Basket , CUTLERY KIT
243 6	4812 458 19247	Grille saphire
261 0	4812 462 79831	Rail telescope, inner
261 1	4812 462 79768	Cap rail rear
261 2	4812 462 79902	Cap rail front
263 0	4819 520 18013	Ball cage cpl.
263 1	4812 310 48026	Service kit balls plastic
265 0	4812 404 48935	Basket adjustm. ,CPL WH
265 2	4812 404 48934	Basket adjustm. ,CPL WH
301 0	4812 453 72694	Control panel ,ADP 4730
303 1	4812 460 38148	Plate,handle
331 0	4812 413 59155	Knob program cpl. WH
332 0	4812 410 29163	Button ,START
332 1	4812 410 29242	Button
332 3	4812 410 29166	Button ON/OFF
350 1	4812 381 28077	Window ,7 SEGMENTS


Pos. No.	12NC Code	Description
350 2	4812 381 28068	Light guide
350 3	4812 381 28075	Light guide
400 0	4812 361 58334	Motor +SP,50Hz,per.HP-PNT
405 1	4819 515 28158	Gasket
420 0	4812 121 18132	Capacitor
421 0	4812 121 18158	Interf.filter
430 0	4812 360 18508	Pump,draining cpl.
430 1	4812 466 68689	Gasket
442 0	4812 361 18196	Blower cpl.
450 0	4812 259 28684	Heating element
480 0	4812 321 28425	Cable harness (EBL) with LS6
480 1	4812 321 28426	Cable
480 3	4812 401 18418	Protector f.wiring
490 0	4819 321 18136	Cable,mains 2m SA
490 1	4812 321 28367	Strain relief
521 0	4812 218 38258	User board
521 8	4812 530 78066	Axle program knob grey
571 0	4812 281 28379	Valve inlet
575 0	4812 281 28361	Regen.valve
583 0	4812 271 28407	Switch diaphragm
616 0	4812 281 18047	Contact,reed salt
616 1	4812 271 58161	Contact,reed rinsing agent
620 0	4812 310 28235	User board
621 0	4819 410 29004	Switch ON/OFF
633 0	4812 271 38355	Microswitch door
680 0	4812 418 68317	Combidosage cpl.
680 1	4812 466 68495	Gasket
681 1	4812 466 68497	Gasket
681 2	4812 440 18975	Flap
682 0	4812 466 68496	Gasket
691 0	4812 282 68012	Feeler NTC
701 0	4819 530 28926	Hose, inlet 2.5 m (Eltek)
701 1	4812 310 18302	Yoke
701 2	4822 480 50159	Sieve inlet
710 0	4812 418 68128	Monoblock
710 2	4812 310 38896	Threaded ring
710 3	4819 466 69562	Gasket set
714 0	4812 462 79903	Threaded cap
716 0	4812 418 68147	Reg.dosage with flowmeter
716 1	4812 466 68475	Gasket
716 2	4812 462 78994	Cover
717 1	4812 462 79793	Stopper
721 1	4812 360 68689	Spray arm lower. cpl. sa
722 0	4812 360 68687	Spray arm upper sa
722 2	4812 360 68693	Spray arm , UPPER
723 0	4812 360 68691	Douche ceiling
726 1	4812 530 29331	Tube assembly cpl.
726 2	4812 505 18208	Nut
743 0	4812 530 48134	Air guide
743 1	4812 530 28102	Hose, inlet
743 2	4812 440 19526	Air guide lower
743 3	4812 462 79857	Cover
743 4	4812 281 38001	Valve disk
743 5	4812 466 98934	Disc
743 7	4812 466 68514	Gasket

Spare part list

Model ADP 4730 WH
Service No. 851156010810
Version 851156010810


Pos. No.	12NC Code	Description
751 0	4812 418 18338	Water collector
755 0	4812 530 29119	Bend
755 2	4812 530 48148	Tray,leak
756 0	4812 360 58099	Floater
761 0	4812 480 58122	Sieve fine
761 2	4812 418 18337	Cover sieve
761 3	4812 418 18341	Cover
761 4	4812 530 58141	O-Ring
763 0	4812 480 58123	Sieve coarse
781 0	4812 530 29113	Hose,draining
781 3	4812 281 28417	Flap non-return
783 4	4812 530 28888	Hose
783 6	4812 530 28796	Hose 10x3x180+10
791 0	4812 532 68099	Gasket
791 2	4812 530 58093	Gasket
791 4	4812 466 68503	Gasket
791 5	4812 466 68504	Gasket
901 0	4822 401 10258	Clamp,hose 10-18 mm
901 1	4812 401 18424	Strap 050,0
901 2	4812 401 18157	Strap 32-50/9 C61
901 5	4812 401 48573	Strap 028,6
910 1	4812 502 18394	Screw 3,5x14-H
910 2	4812 502 18363	Screw 4,0x12-H
910 3	4812 502 18527	Screw 4x15 T20
910 4	4812 502 18385	Screw M3,5x8-T15M
910 5	4812 502 18393	Screw 3,5x9-1 Tx15
910 7	4812 502 18397	Screw INOX A2 M 5X12
910 8	4812 502 18389	Screw 5x20 T20
910 9	4812 401 18425	Screw 2,5x18-H
964 0	4812 466 68536	Gasket housing ri/le
964 1	4812 466 68469	Gasket housing upper
993 0	4819 530 29028	Bow
993 1	4812 466 78388	Foil protection
993 5	4822 532 80216	Funnel salt

Exploded view

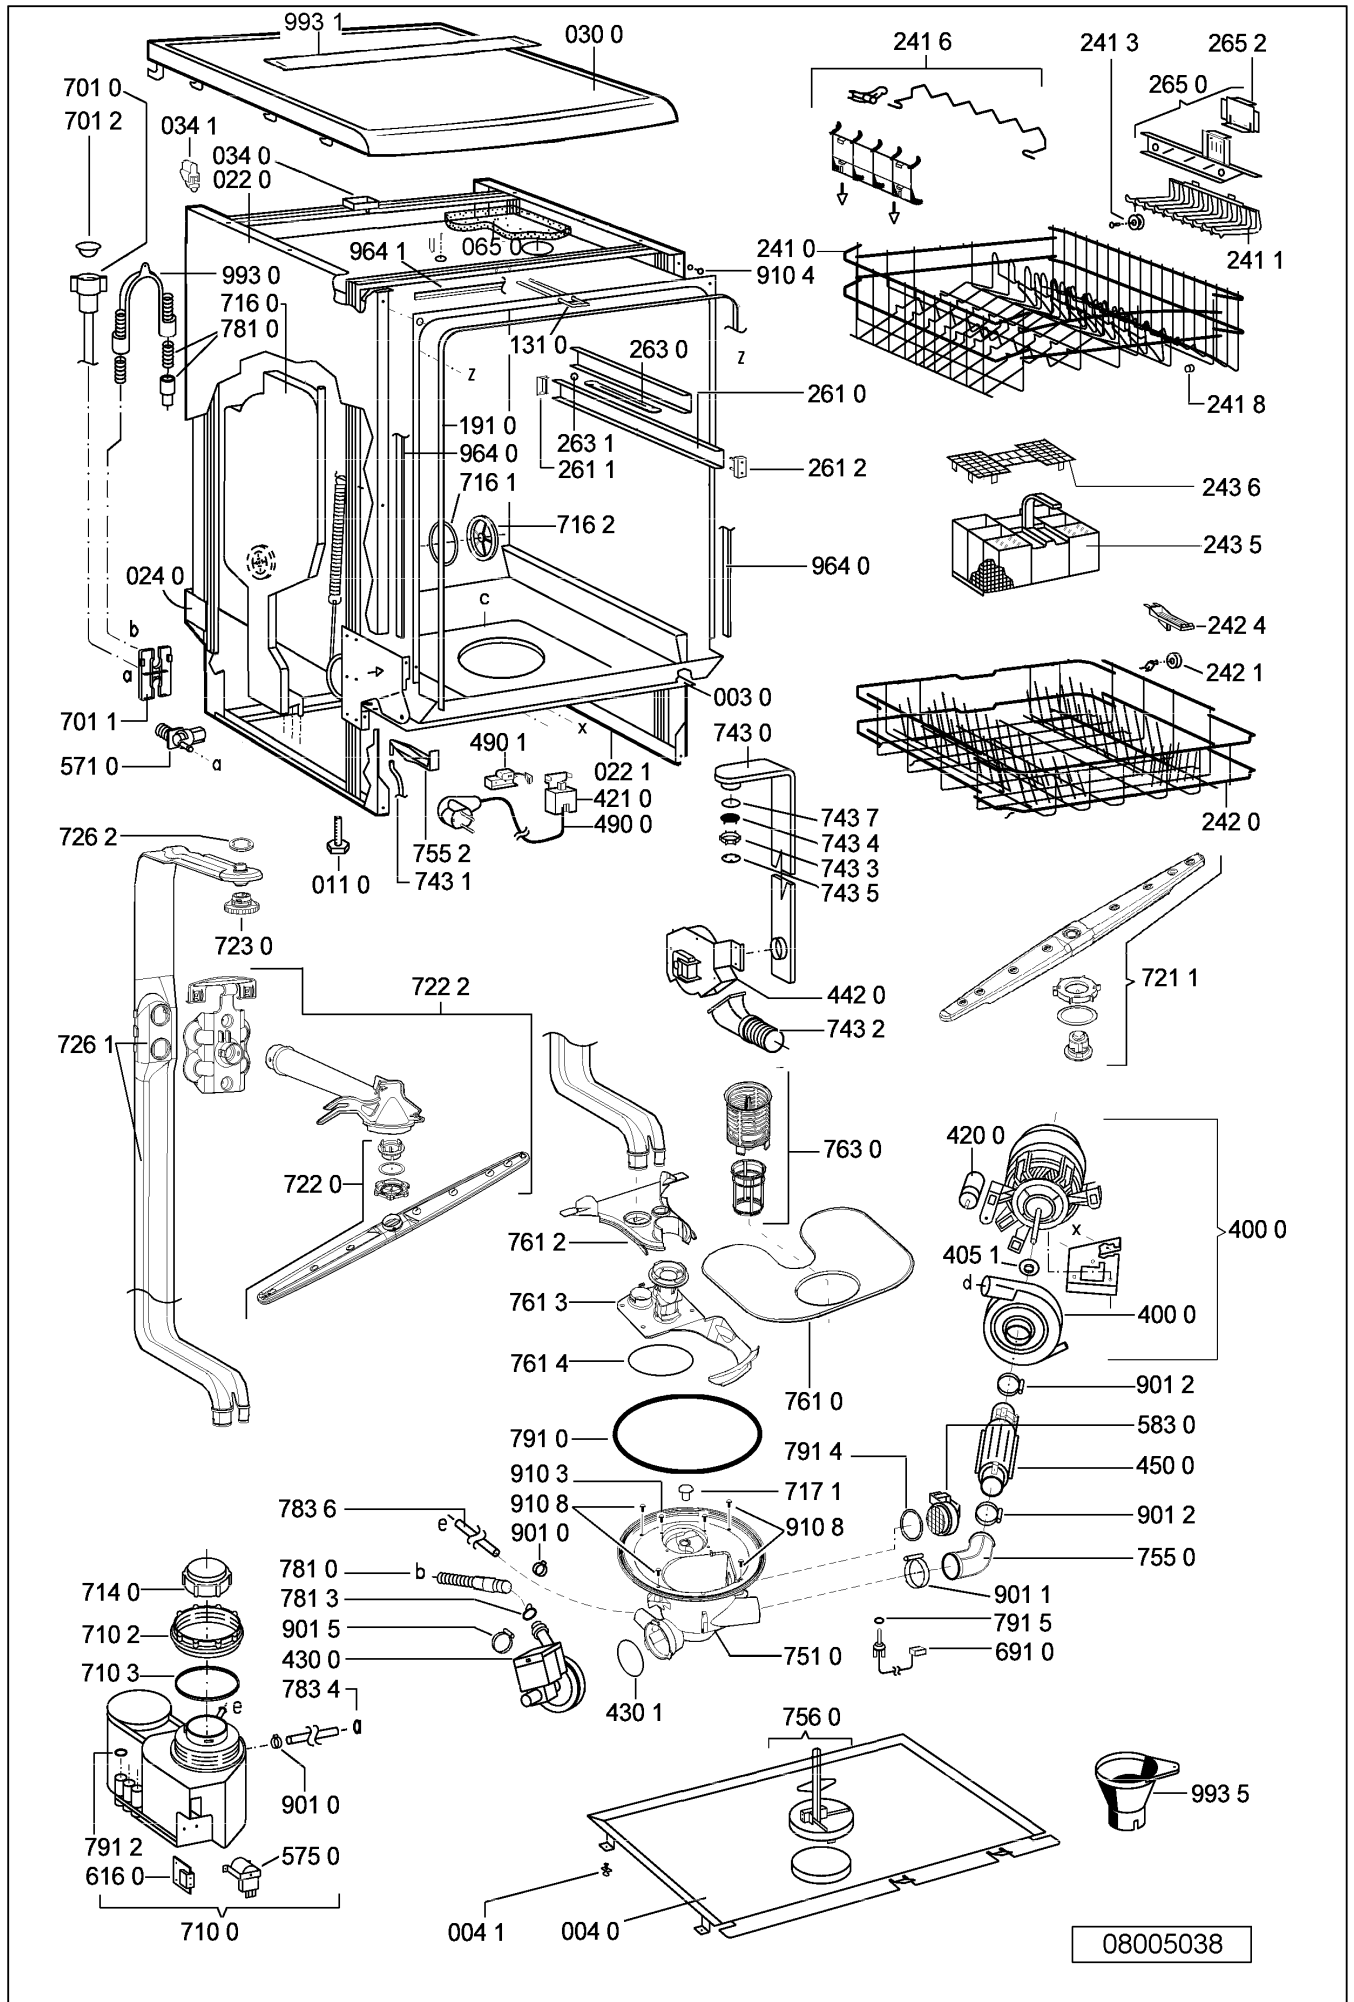


08005038

Exploded view

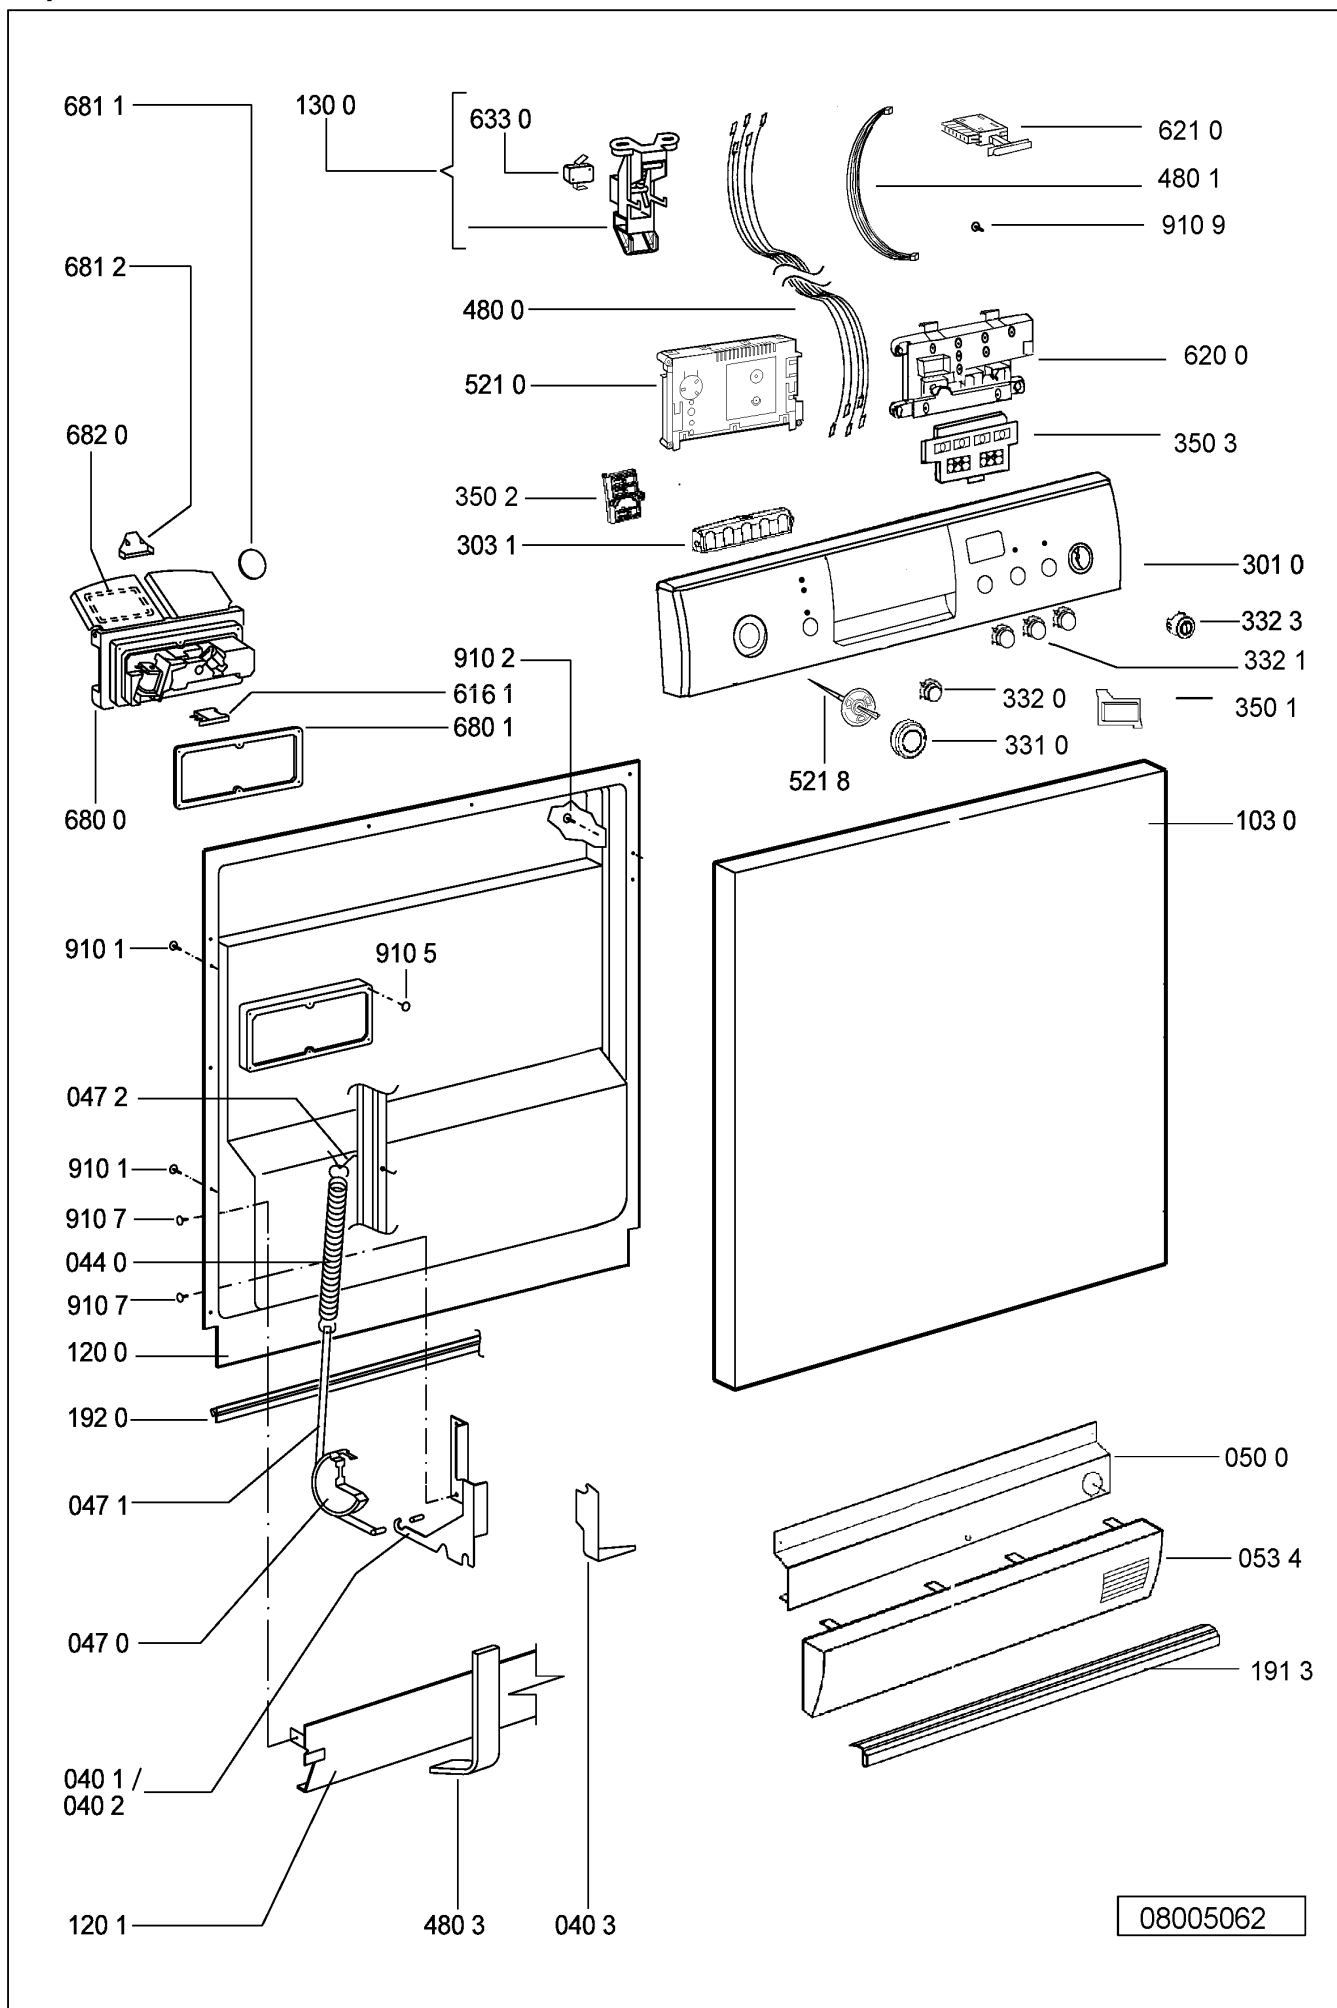

08005062

4619 727 04361

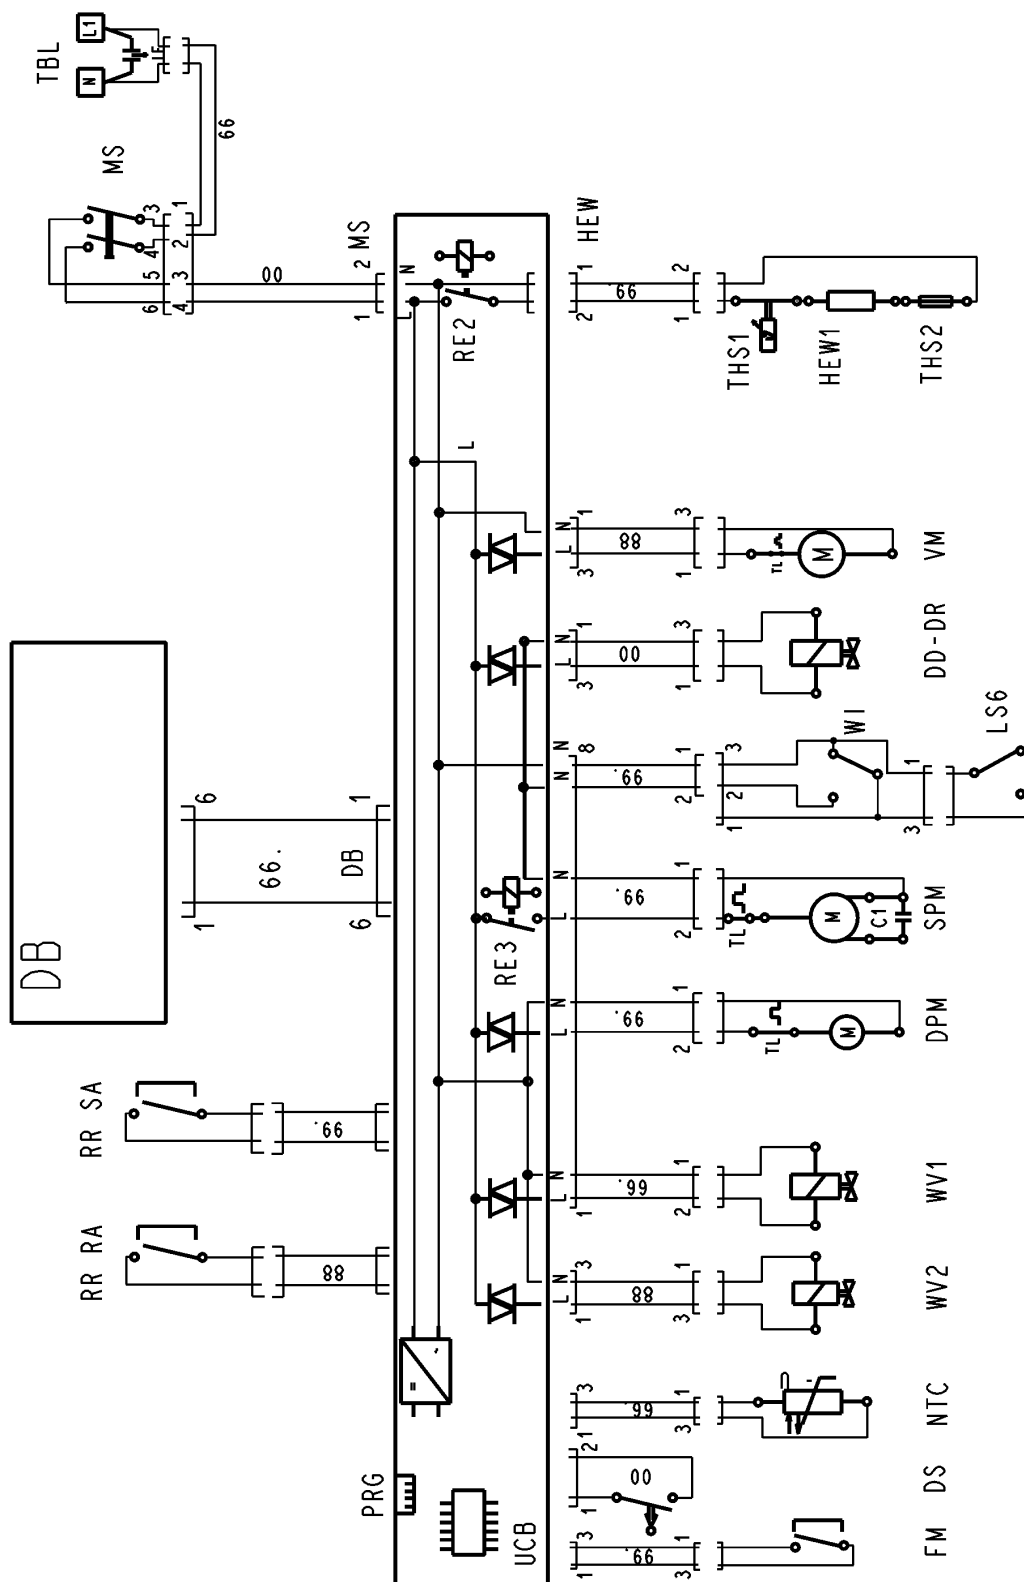

- | | | |
|-------|----------------------------|--|
| C1 | Capacitor | |
| DLB | Timerswitch Delay | |
| DPM | Drain pump motor | |
| DD | Cleaning agent dosage | |
| DR | Final rinse dosage | |
| DS | Door switch | |
| FM | Flow meter | |
| HEW | Heating | |
| IF | Interference filter | |
| L | Line | |
| MS | Main switch | |
| NTC | Thermostat temp. sensor | |
| N | Neutral | |
| PRG | Plug to program | |
| PRE2 | Relay Heating | |
| RE3 | Relay Spray pump motor | |
| RR SA | Reed relay salt | |
| RR RA | Reed relay rinsaid | |
| SPM | Sprayarm motor | |
| THS1 | Safety thermostat | |
| THS 2 | Fuse | |
| TBL | Power supply terminal | |
| TL | Winding protective contact | |
| UCB | User- and Control board | |
| VM | Fan ventilator | |
| WV1 | Water inlet valve | |
| WV2 | Water regenerating valve | |
| WI | Water indicator | |
| 00 | black | |
| 66 | blue | |
| 88 | grey | |
| 99 | white | |

Function diagram
Point permanent wash

(Ä06: 4619 724 44201/06)
18.11.2003
4619 724 44201-1

[illegible]

Text/Legend

Test procedure for SERVICE-TEST-PROGRAM Point dishwashers appliances with and without 7 Segment Display and an Integrated Board.

Switch on the appliance.

1. If there is a defective component indicated, open up the control board (CB).
2. Check the component.
Unplug the indicated component from the control board (CB) and check it by using an ohmmeter.
If the resistance is not correct, check the cables to the component and check the component itself.
3. Visually check the control board (CB).
4. At the end of the repair start the appliance and delete the failure (press in the start button for more the 1.5 sec). After this, start the test program again to see that the failure is solved.

More details: see following pages.

Attention:

Danger of short circuit. Short circuits on components can damage the control board (CB).

If electronic boards are wet, do not switch the appliance on.

To check the appliance, plug in the appliance.

Failures, which occurred during the program will be stored and indicated by flashing the start LED.

The failure will be indicated and can be related to the failure table.

To erase the failures, you must push the start button longer than 1.5 seconds.

The failures:

F1 NTC break

F9 continuous water inlet

are checked and indicated immediately after start of the program.

Therefore these failures have to be solved before starting the test program.

When these failures are not solved, the test program does not run.

The electrical components get their voltage via triac from the control board (CB). To test the voltage the voltmeter must be connected in parallel to the component (the component must be connected). If the component is disconnected, then the output voltage from the control board (CB) is reduced.

After starting a program this program is locked. That means neither by unplugging/switching off the appliance nor by setting to another program, the first set program cannot be changed. Changing of the program is only possible by pushing the start button again for longer than 1.5 sec..

Attention: New service control boards start at first with the service test program. This test program is without back rinsing. Dangerous for overfilling the appliance, in case the appliance is not empty. By running the test program or another program a second time, the back rinsing will be carried out as usual.

Text/Legend

Handling of failures

- F1. NTC break
Temperature out of the normal value (-3°C till +85°C)
- Temperature inside higher than +85°C
- NTC defective
- Dishwasher is frozen, less than -3°C
If the temperature is less than -3°C, fill the appliance with a cup of warm water to warm it up before you start it..
- F2. **Water Leakage**
- **Water is in the drip tray**
Floater (LS6) switches off the WV1 and the electronic switches on the DPM until WI reports that it is empty.
- F3. Heating System Defective
Indicated after app. 25 minutes (1. check after 5 min., after that follow 2 more checks, before the failure is indicated)
- Heats too slowly (less than 1.5 °C in 10 min.)
- Heating (HEW) defective
- Relays (RE2) on control board (CB) is defective
- NTC - resistance fluctuation
- F4. Draining Failure
Drain pump starts and after 4 min. the WI detects that it is "not empty"
- Drain pump (DPM) defective
- Siphon closed
- Control board (CB) defective
- WI defective. (doesn't switch back anymore)
- F6. Water Tap Closed
Water valve (WV1) is switched on but flow meter (FM) sends no impulses (less than 10 imp. in 10 sec.) and the water indicator (WI) is off (empty)
- Water tap closed
- Water inlet hose blocked
- Water inlet valve (WV1) defective
- F7. Flow Meter Failure
Water inlet valve (WV1) is switched on and the water indicator (WI) is on (full).
- Flow meter (FM) sends too few impulses (less than 10 imp. in 10 sec.)
- Water tap closed during water inlet
- Water inlet hose blocked
- Water inlet valve (WV1) defective
- Flow meter (FM) defective

Text/Legend**F8. Water Level Failure.**

Failures are supervised over the whole program.

Spray pump works, the WI switches more than 20 times in 2 minutes back.

- WI defect? Should switch on after approx. 1 Ltr
- Sieve blocked
- Water strongly foams
- Pot has over turned and has filled with spray water
- No stable spray pump (SPM) pressure.

F9. Continuous Water Inlet

Water inlet valve (WV1) is switched off, water indicator (WI) on, flow meter (FM) sends impulses (more than 10 imp. in 10 sec.)

- Water inlet valve (WV1) mechanically not closed
- Triac (CB) permanently switched on. (short circuit)

Reaction: interval 30 sec. drain pump on / 20 sec. drain pump off in interval

FA. WI Failure

If the electronic signal of the Flow meter has been received for the 3.4 Ltr. of water on permanent wash system and the WI signal "Water in the sump" is missing then an failure is recorded.










FE. EPROM Failure

After the start of the test programme the EPROM is immediately checked for errors and an error is displayed if any are found.

Text/Legend

Failure Display POINT

Appliances with 1 and 2-digit 7 Segment Display and without 7 Segment Display

Alarm / Failure	Failure code, Indication in test program when a failure occurs
	Shown with 7 segment display or without 7 segment display
F1 NTC-Failure	 1 x flash 1s Pause 1 x flash.....
F3 Failure in Heating System	 3 x flashes 1s Pause 3 x flashes.....
F4 Draining Failure	 4 x flashes 1s Pause 4 x flashes.....
F6 Water Tap closed	 6 x flashes 1s Pause 6 x flashes.....
F7 Flow Meter Failure	 7 x flashes 1s Pause 7 x flashes.....
F8 Water Level Failure	 8 x flashes 1s Pause 8 x flashes.....
F9 Continuous Waterinlet	START  9 x flashes 1s Pause 9 x flashes.....
FA WI-Failure	START  11 x flashes 1s Pause 11 x flashes.....
FE EPROM Failure	START  15 x flashes 1s Pause 13 x flashes.....

 LED flashing

Text/Legend

Attention:

If you can't start the test program (Start button doesn't flash), normally there is one of the following failures detected: F1 or F9.

When these failures are not solved before, the test program will not run. After solving the failure you must "sign" (erase) the failure.


If a failure is indicated directly after you switch on the appliance. Then fix the mistake, erase failure and start the test program again (see following start procedure).

Start procedure**Start the test program if there is no failure indicated**

1. Turn OFF appliance at the Mains.
2. Select program position 1.
3. Push start button and hold it.
4. Turn On appliance still holding the start button.
5. Release the start button when the Start-LED flashes.
6. Start the test program by pushing the start button again.
7. Failure indication.
8. Repair the failure.
9. Solve the failure by pushing the start button for longer than 1.5 sec.
10. Start the test program again, to see, if the failure really is solved.

Text/Legend

Test Programme

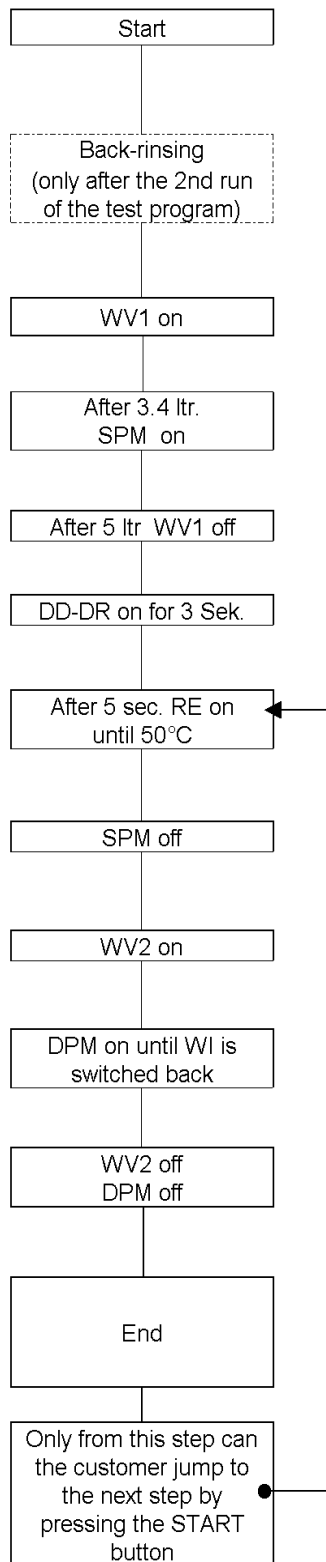

Remarks

The test program runs to the failure position and stops or, if there is no failure, it runs to the end.

To leave the test program push the start button for longer than 1.5 second's.

Not enough salt or rinse aid will not stop the running of the appliance.

When the failure position is reached the failure indication is indicated on the page "Failure Codes"

Attention:

If you can't start the test program (Start button doesn't flash), normally there is one of the following failures detected: F1, or F9

When these failures are not repaired, the test program will not run. After solving the failure you must "sign" (erase) the failure.